




TCH-311011 023.T







FREE STOP PUSH-OPEN LIFT-UP DOOR SYSTEM

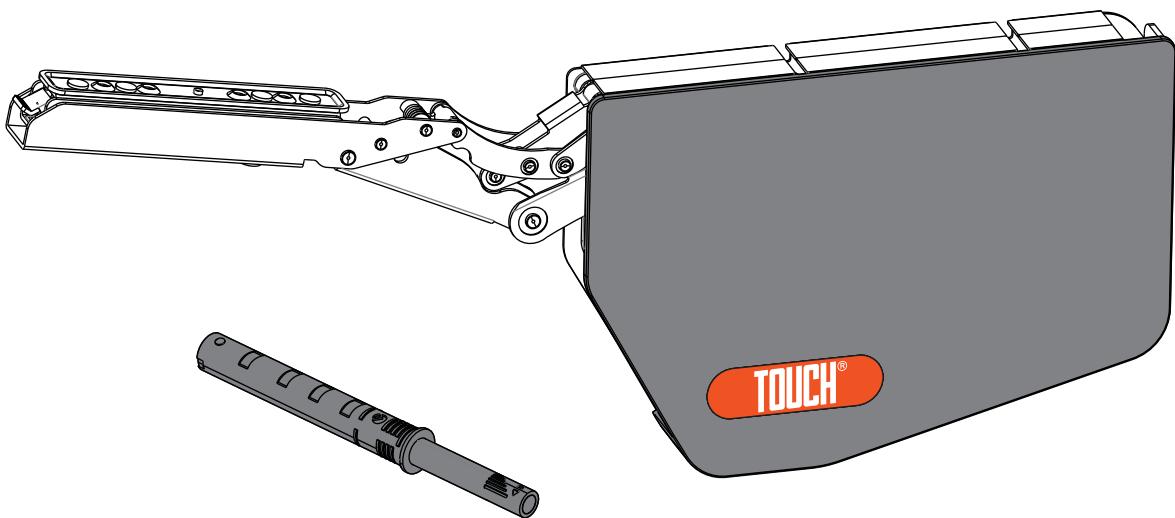



TCH-311011 023.T
INSTALLATION INSTRUCTIONS

Included components

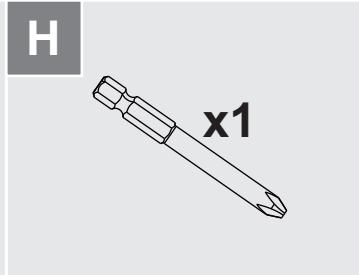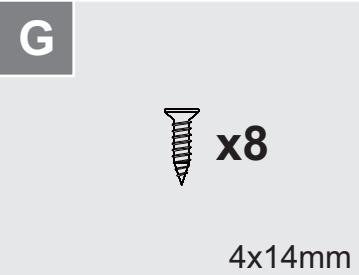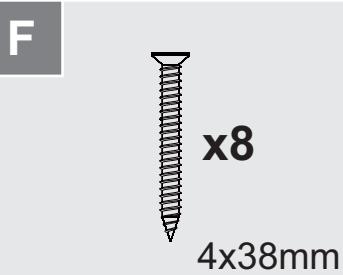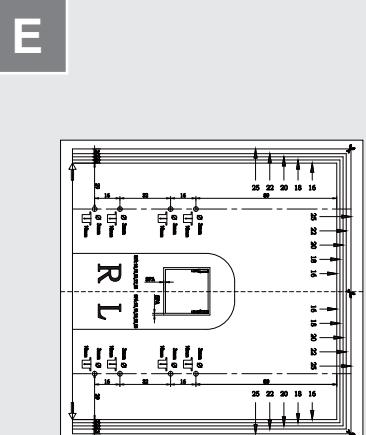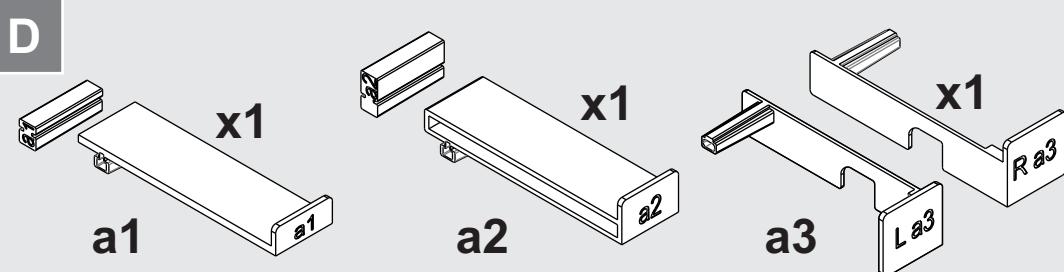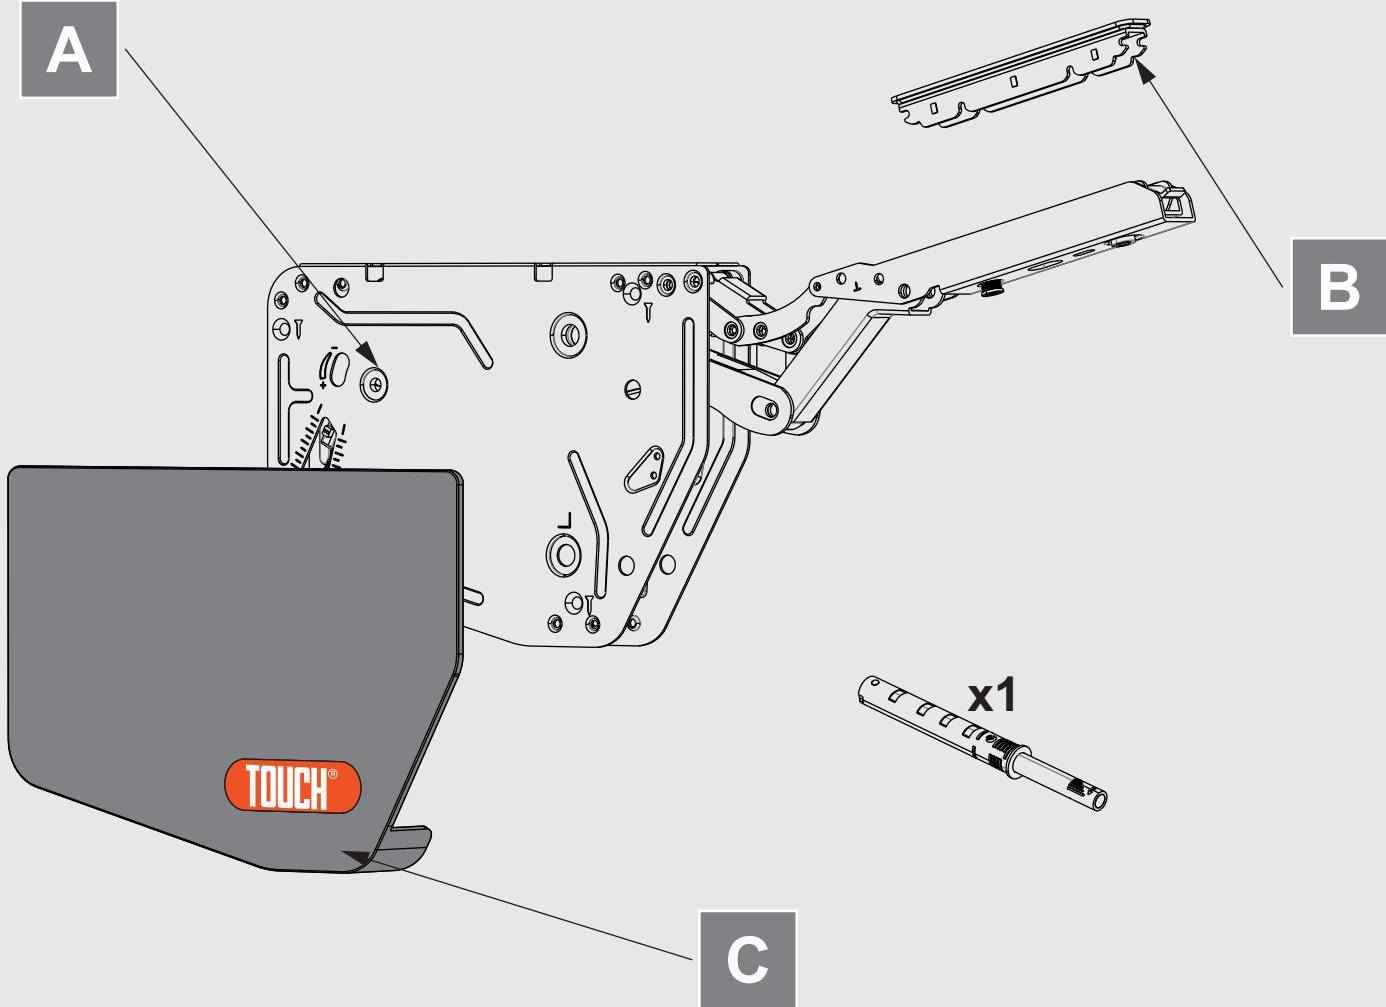

x1




TCH-311011 023.T


INSTALLATION INSTRUCTIONS

Applications


Stacked cabinets

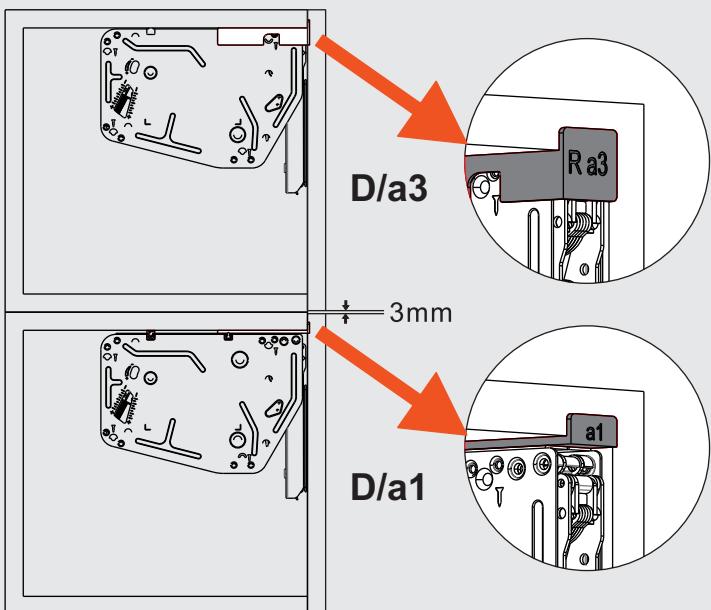

Cabinet with a partition

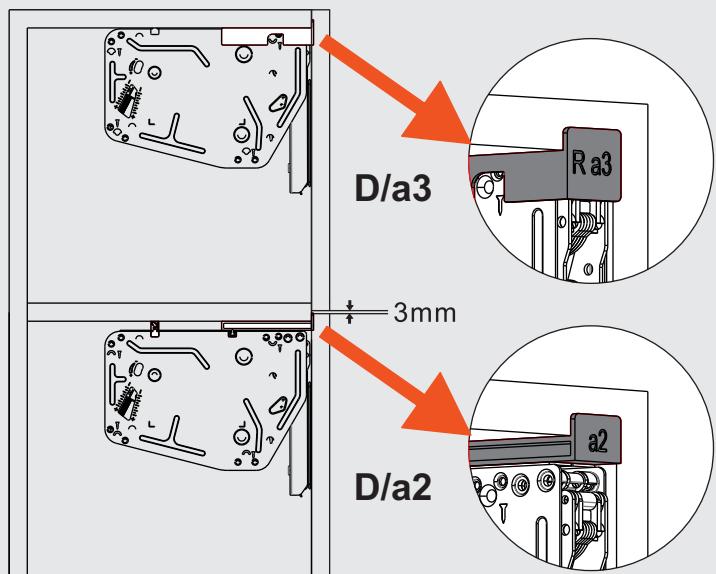

Inset application

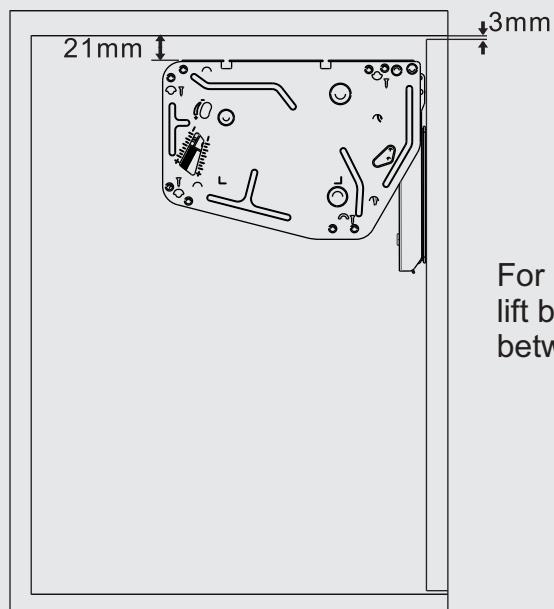


For inset applications, lower the lift by 21 mm to avoid interference between the door and the cabinet.




TCH-311011 023.T
INSTALLATION INSTRUCTIONS

Installation guide


1

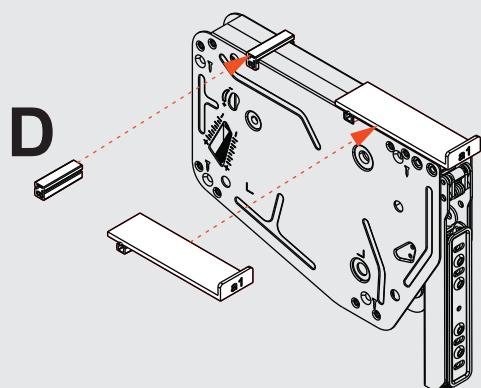


2

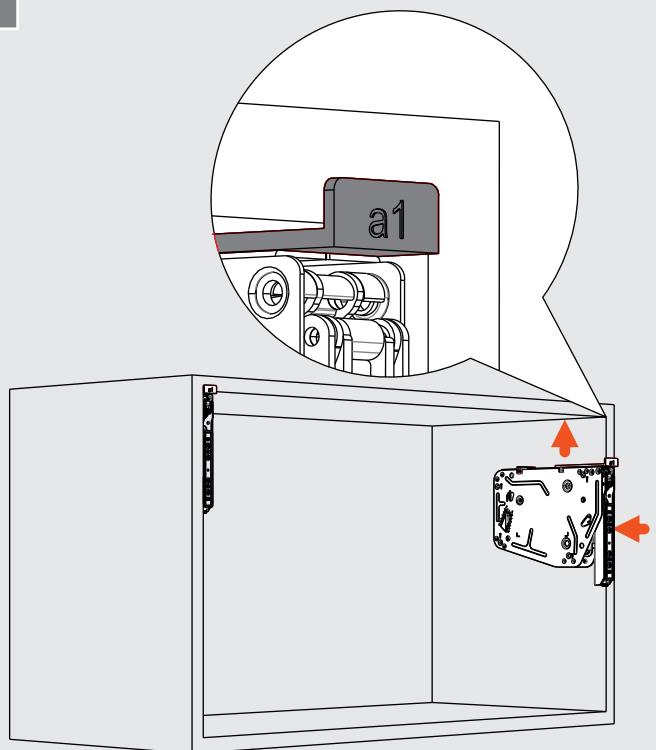

3

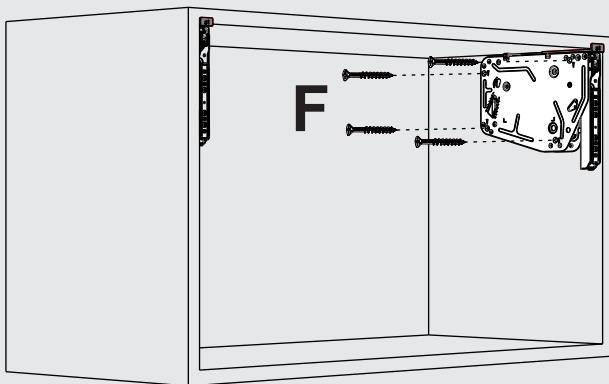

4

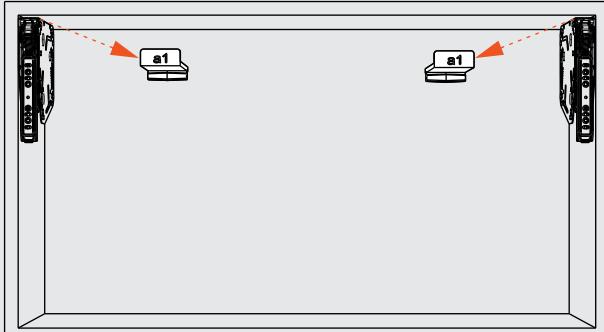





TCH-311011 023.T
INSTALLATION INSTRUCTIONS

Installation guide



i

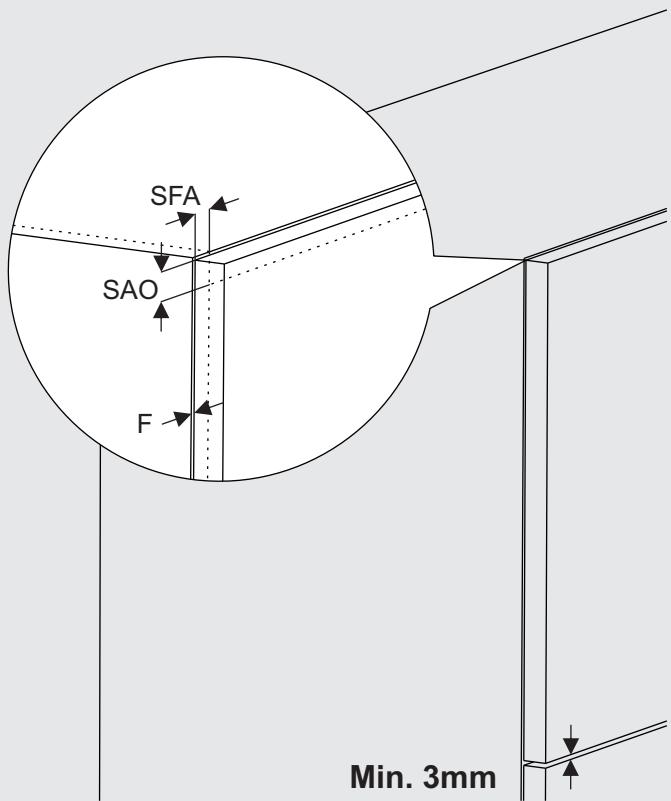


i

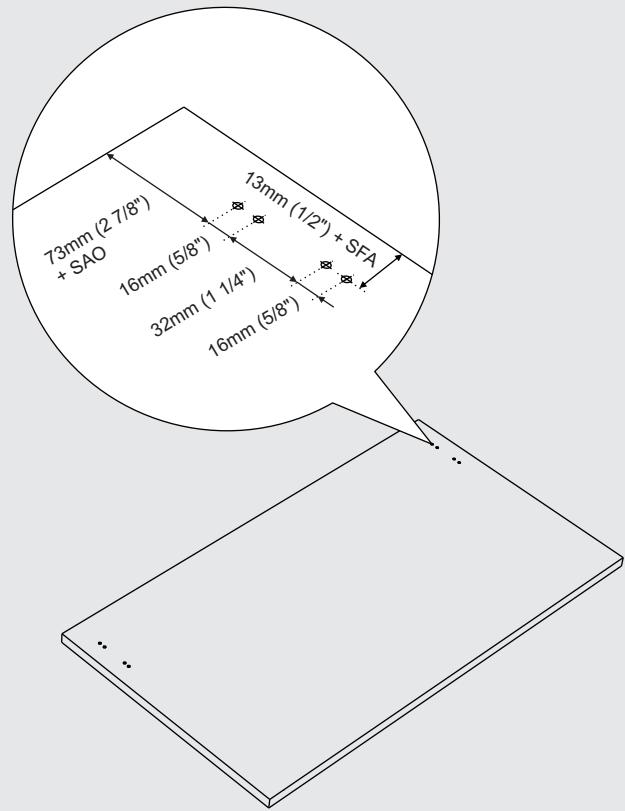

5

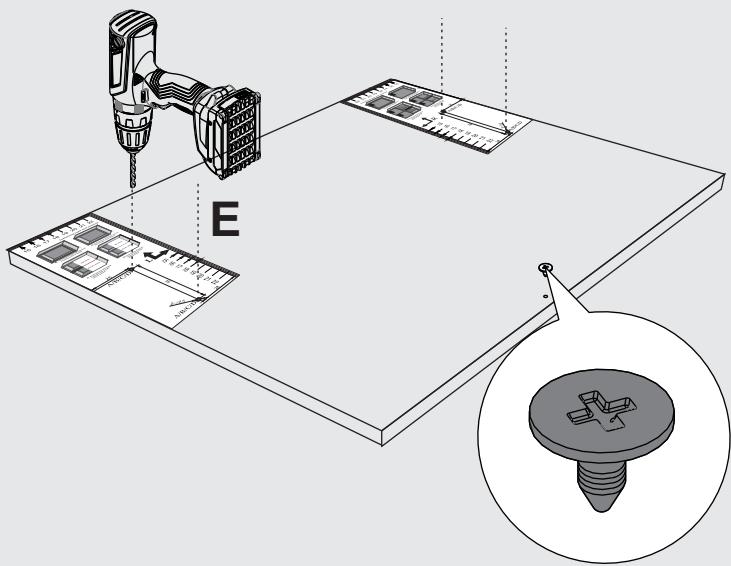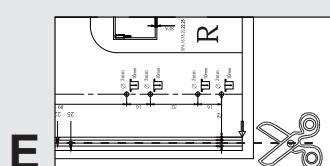

6

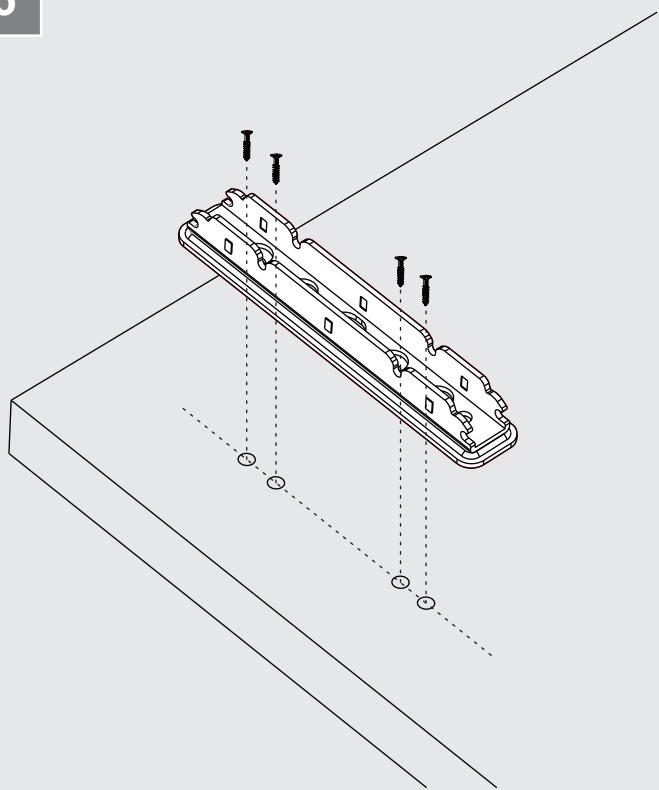




TCH-311011 023.T
INSTALLATION INSTRUCTIONS

Installation guide




WARNING

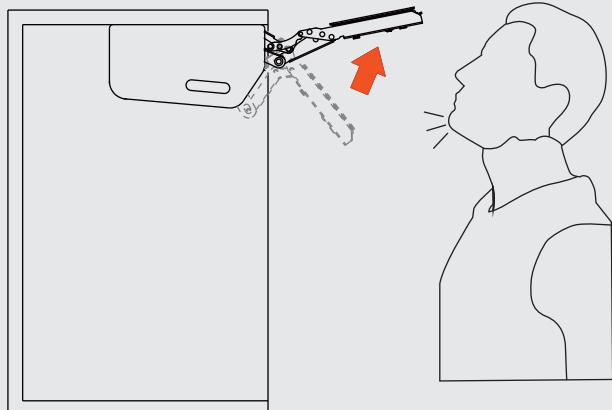


Use care when pulling out the lever. The lever may spring upward unexpectedly, potentially causing injury or damaging the lift system.!


7

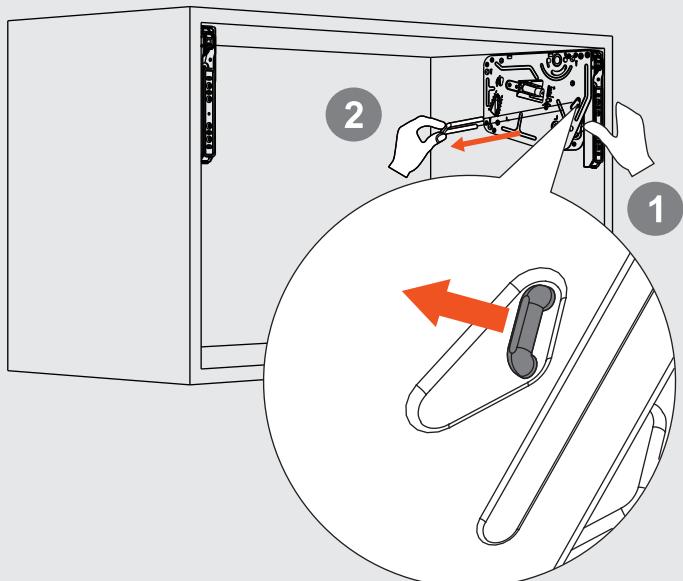

8

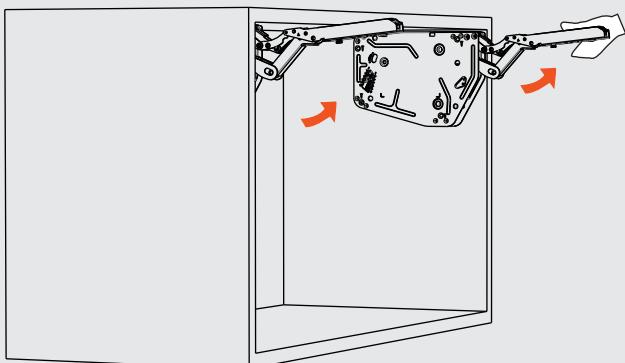

9

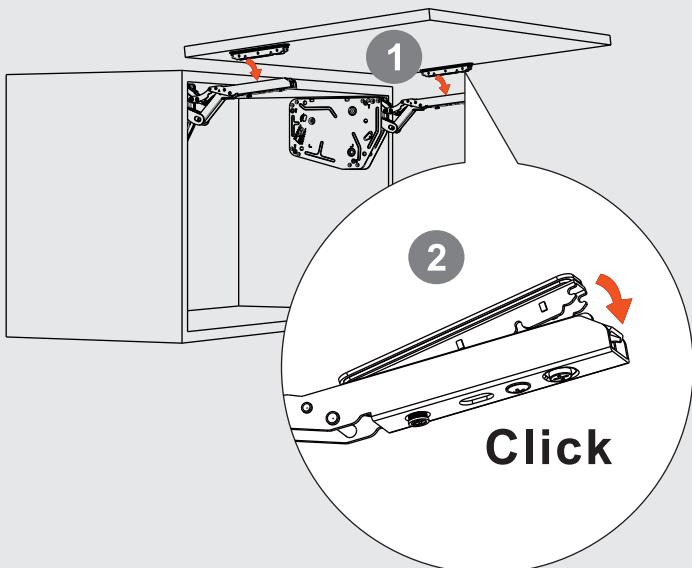





TCH-311011 023.T
INSTALLATION INSTRUCTIONS

Installation guide

10

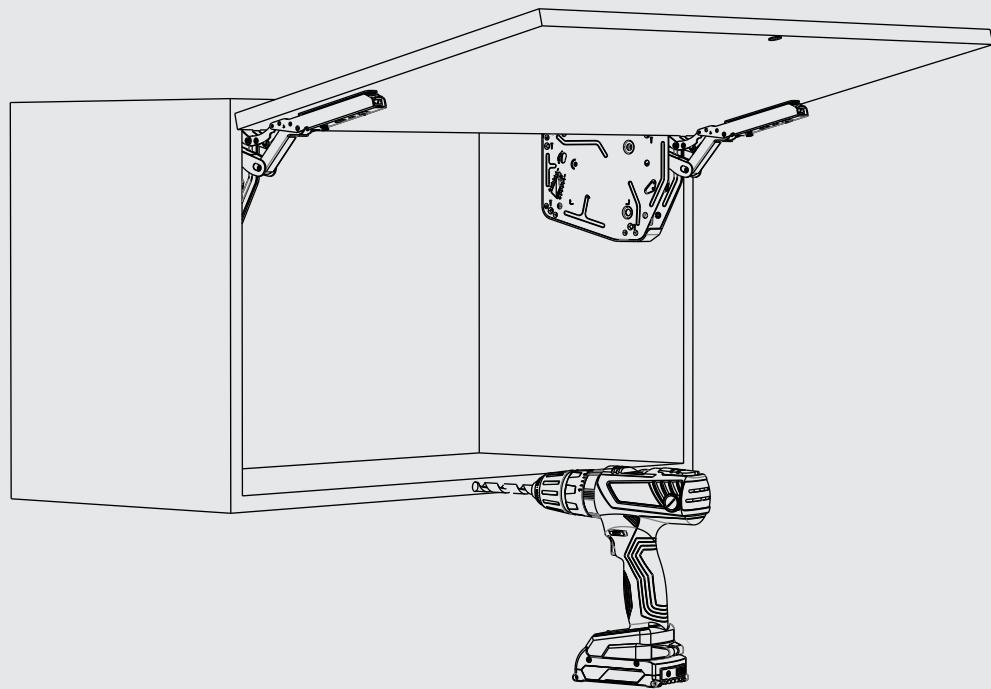

11

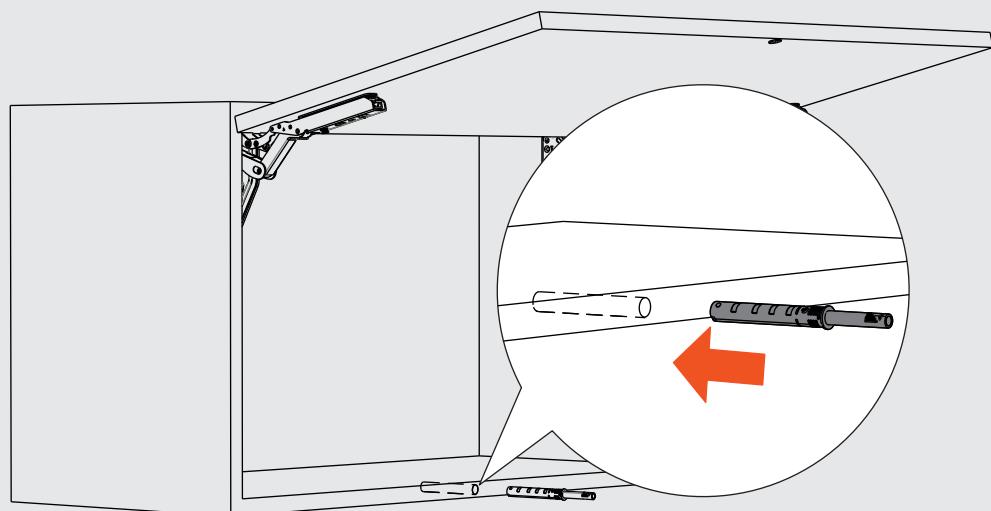




TCH-311011 023.T INSTALLATION INSTRUCTIONS


Adjustment instructions

Front panel alignment adjustment.


Note: Loosen the locking screw before making any adjustments. Once the adjustment is complete, re-tighten the screw to secure the setting.

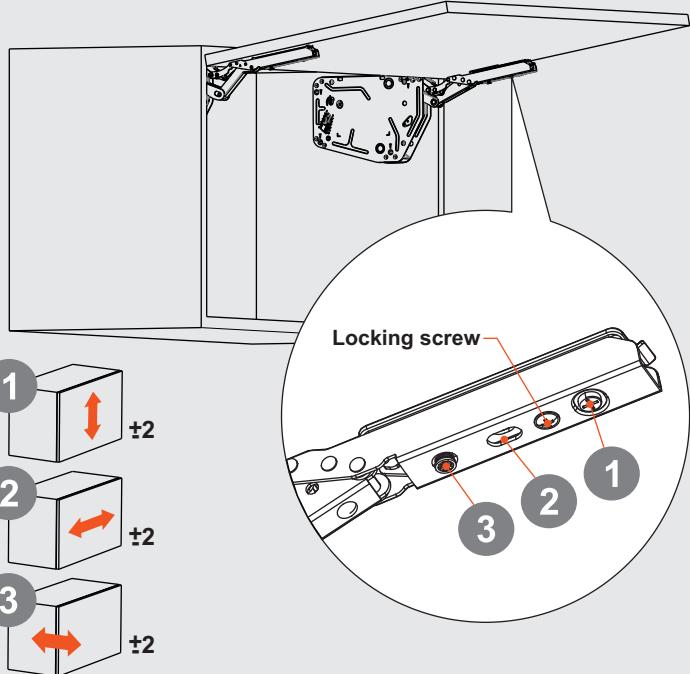

Adjusting door opening range.

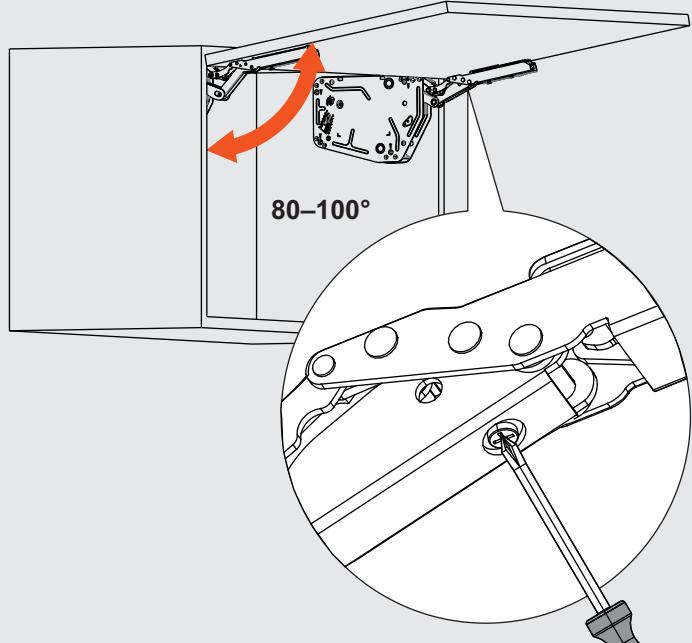

Lift mechanism force adjustment.

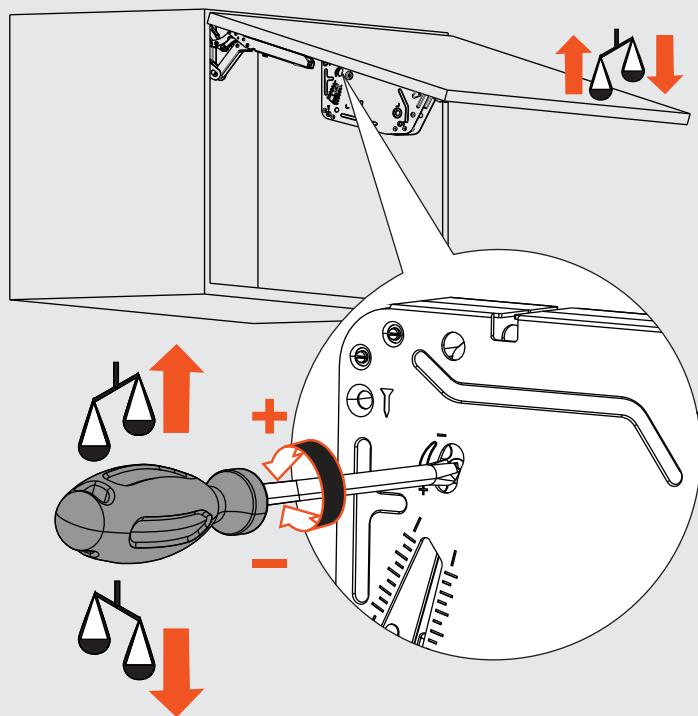



TCH-311011 023.T
INSTALLATION INSTRUCTIONS

Attach cover caps

12

