




TCH-311012 129.S

SOFT-CLOSE VERTICAL PARALLEL LIFT-UP DOOR SYSTEM

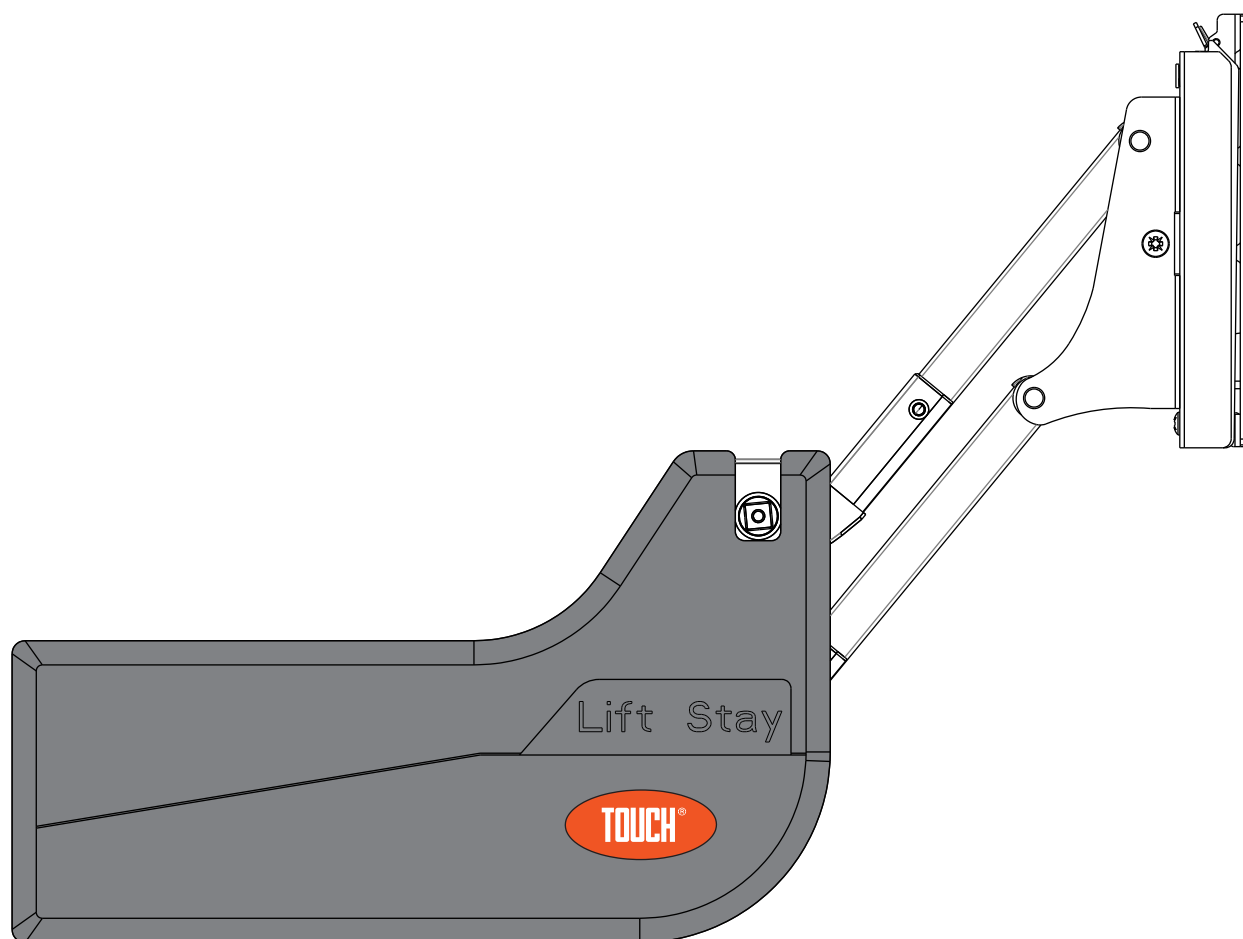



A



G







TCH-311012 129.S INSTALLATION INSTRUCTIONS

Installation guide


1

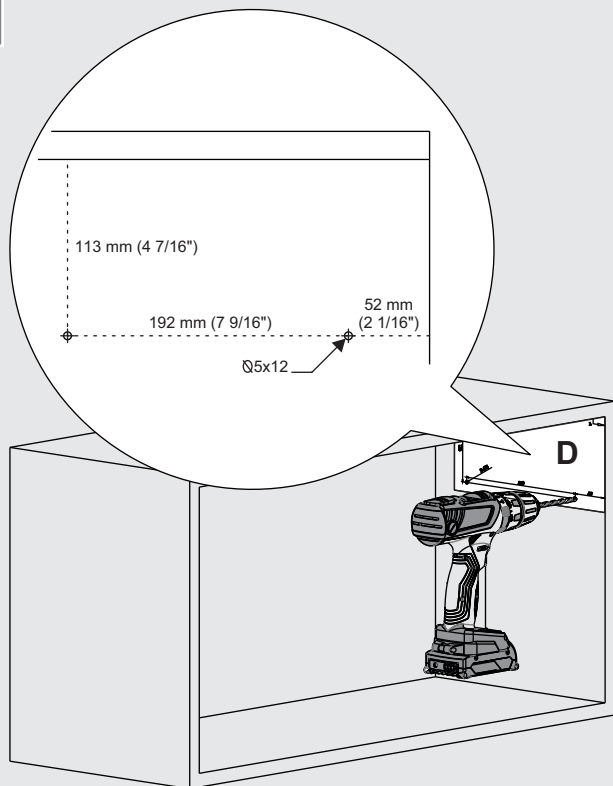


2

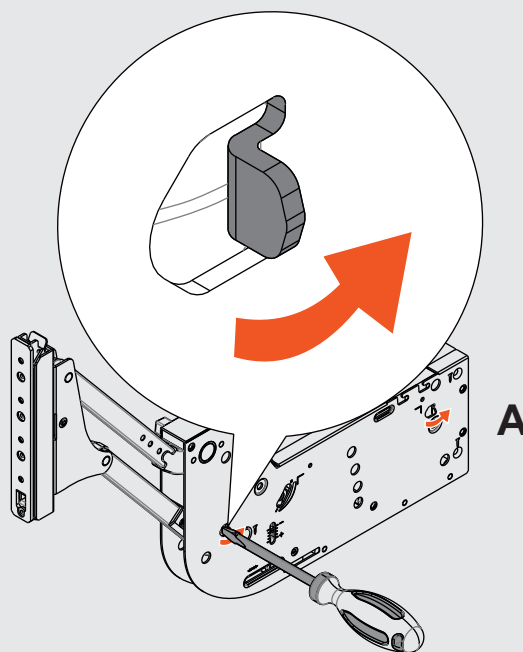

3

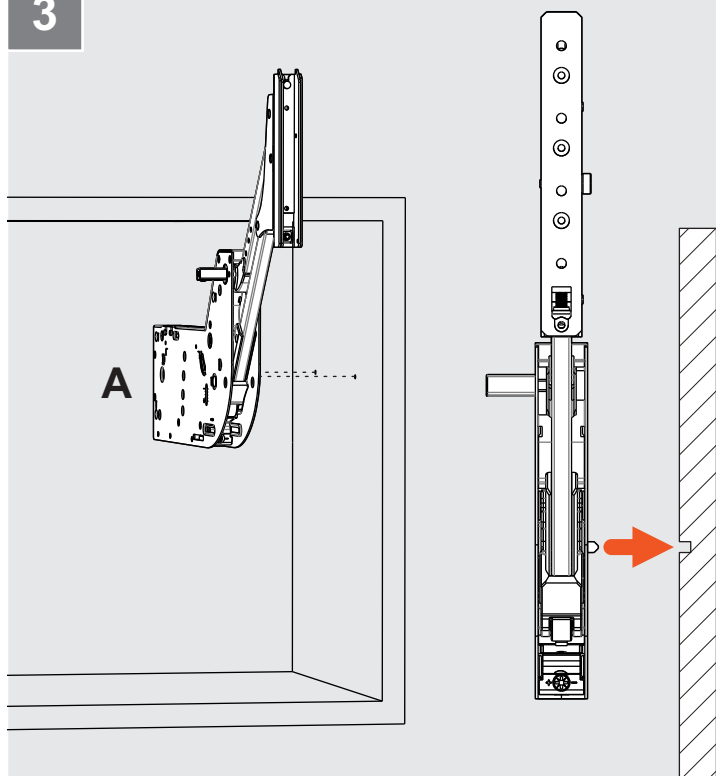

4

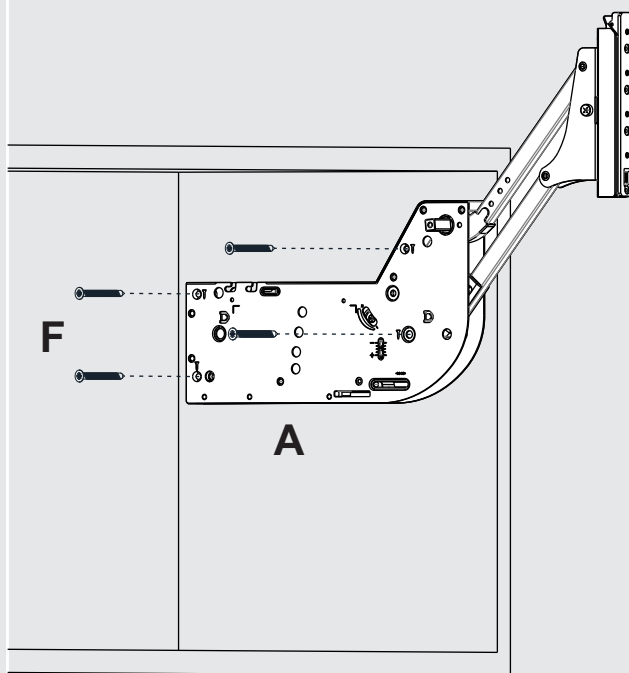





TCH-311012 129.S INSTALLATION INSTRUCTIONS

Installation guide

i

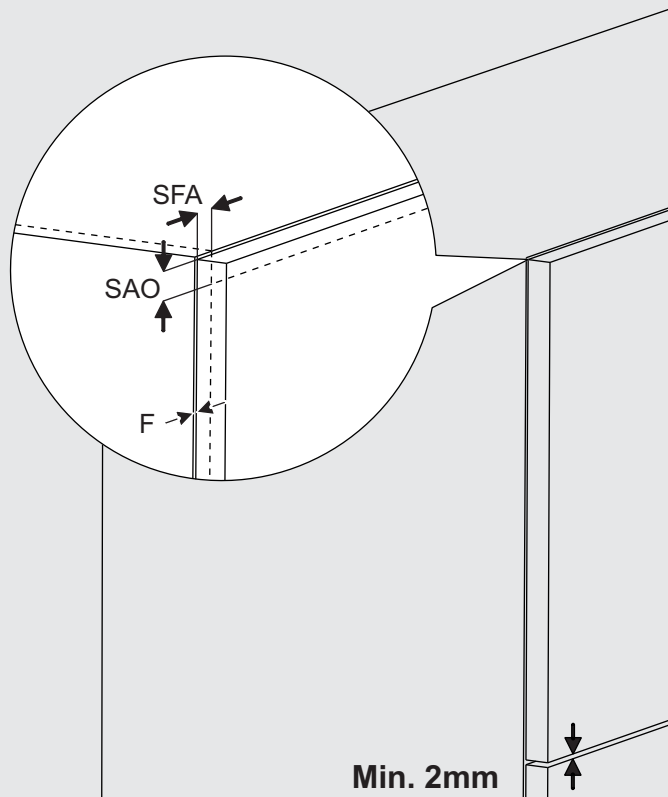


i

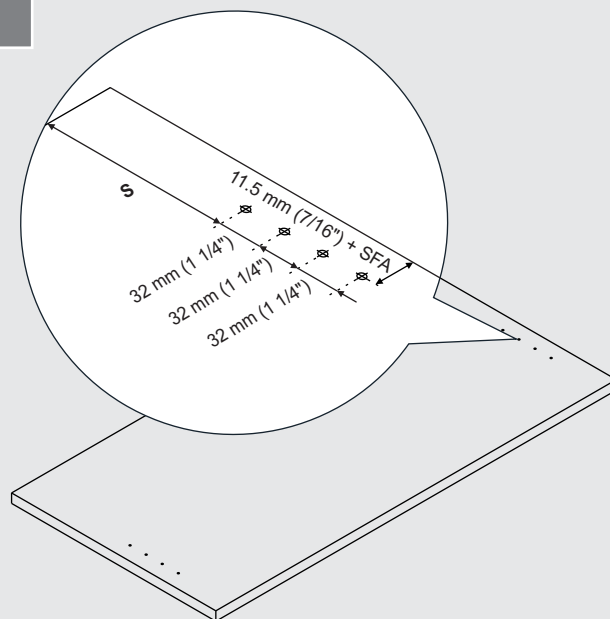


Model No.	S
TCH-311012 129.S.210	242 mm (9 1/2") + SAO
TCH-311012 129.S.240	272 mm (10 11/16") + SAO
TCH-311012 129.S.290	322 mm (12 11/16") + SAO

5

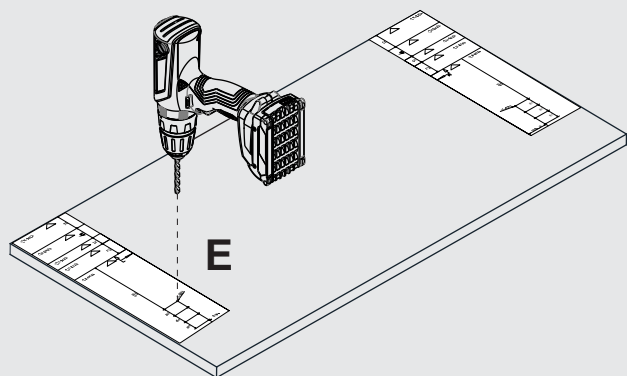

6

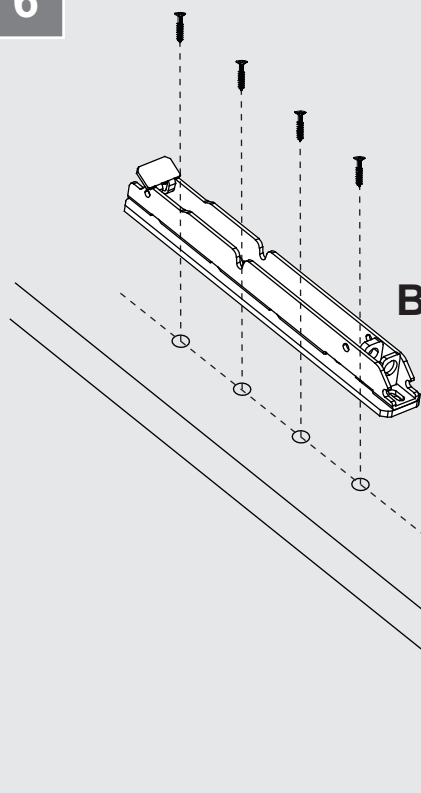




TCH-311012 129.S INSTALLATION INSTRUCTIONS


Installation guide

WARNING

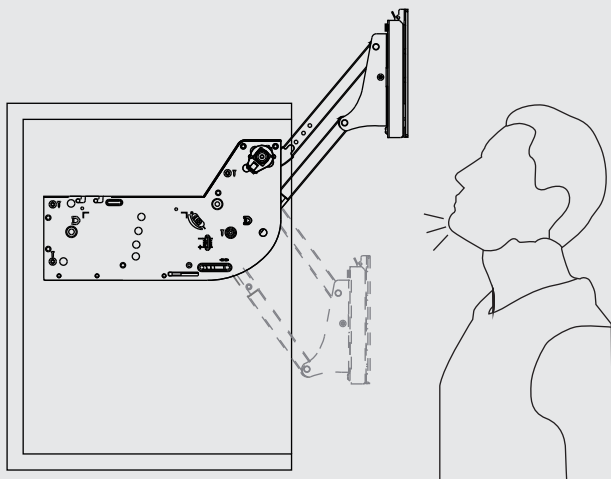


Use care when pulling out the lever. The lever may spring upward unexpectedly, potentially causing injury or damaging the lift system.!

7

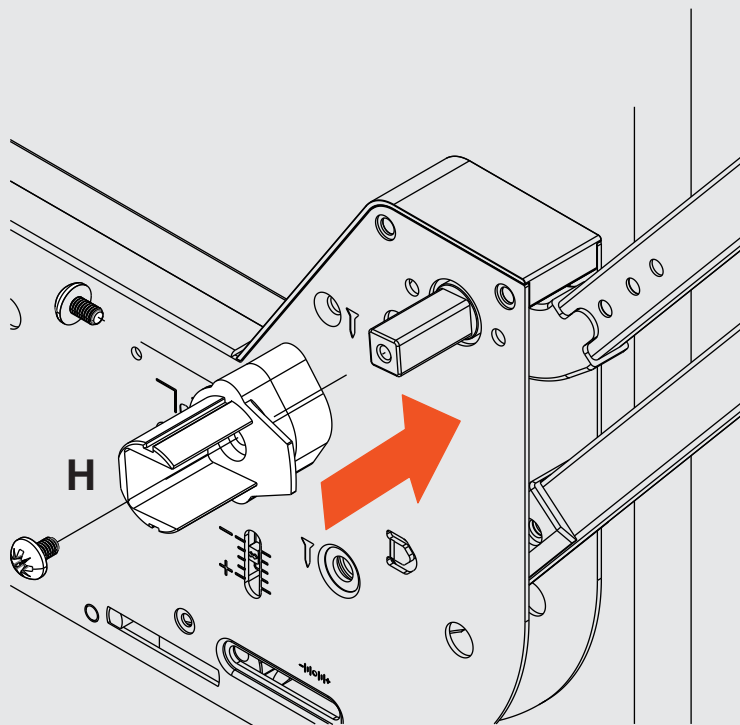


8

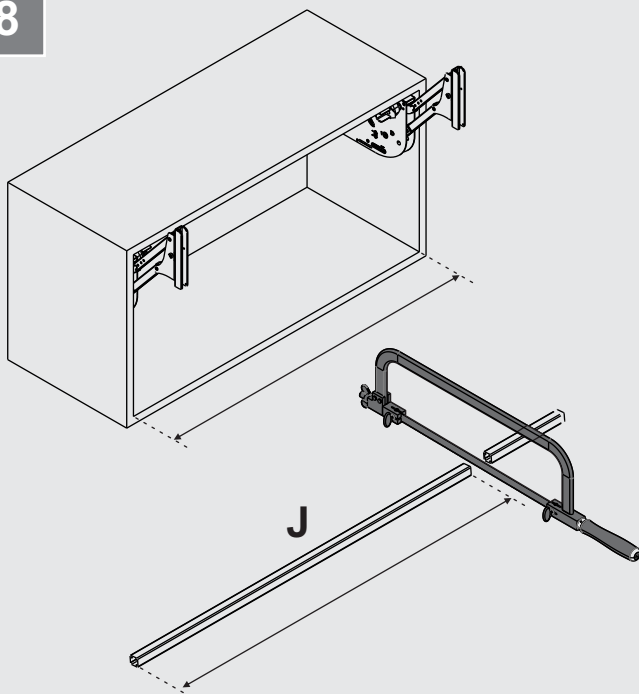

Stabilizer bar length = internal cabinet width minus 102 mm (4").

9

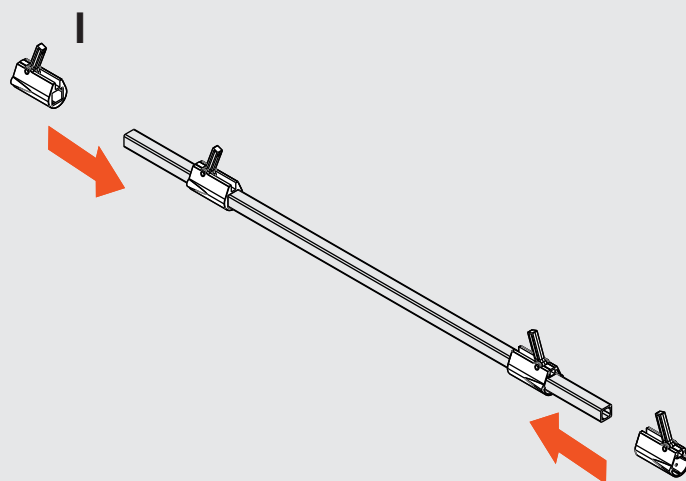





TCH-311012 129.S INSTALLATION INSTRUCTIONS

Installation guide


10

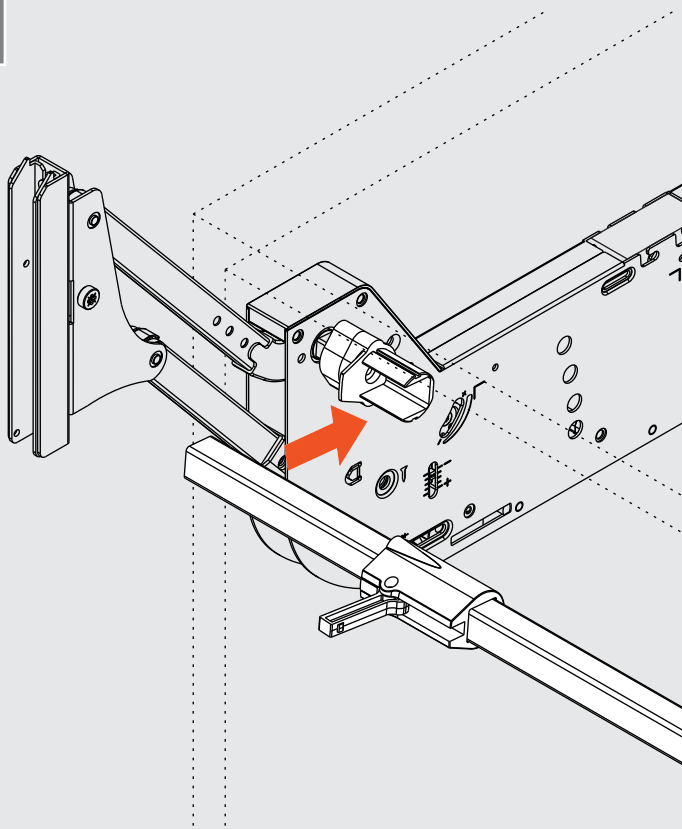


11

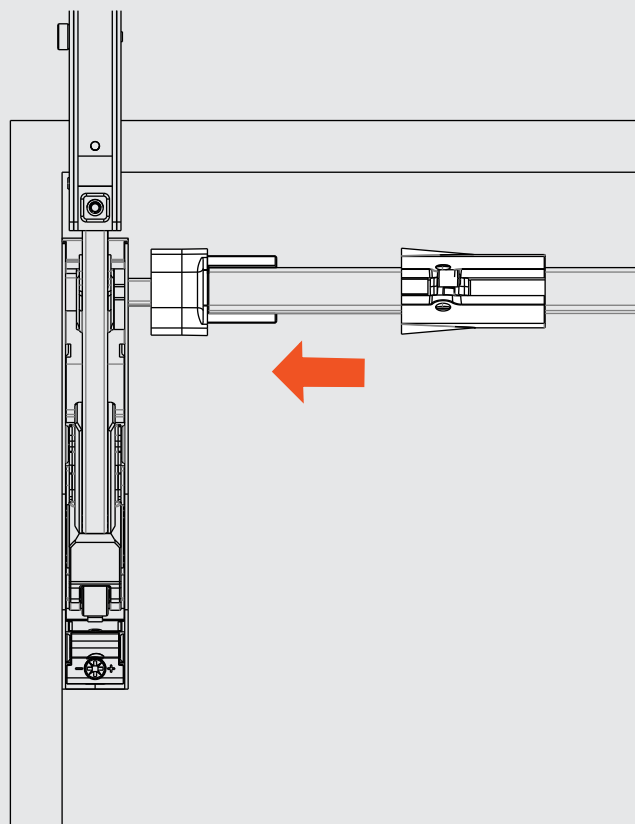

12

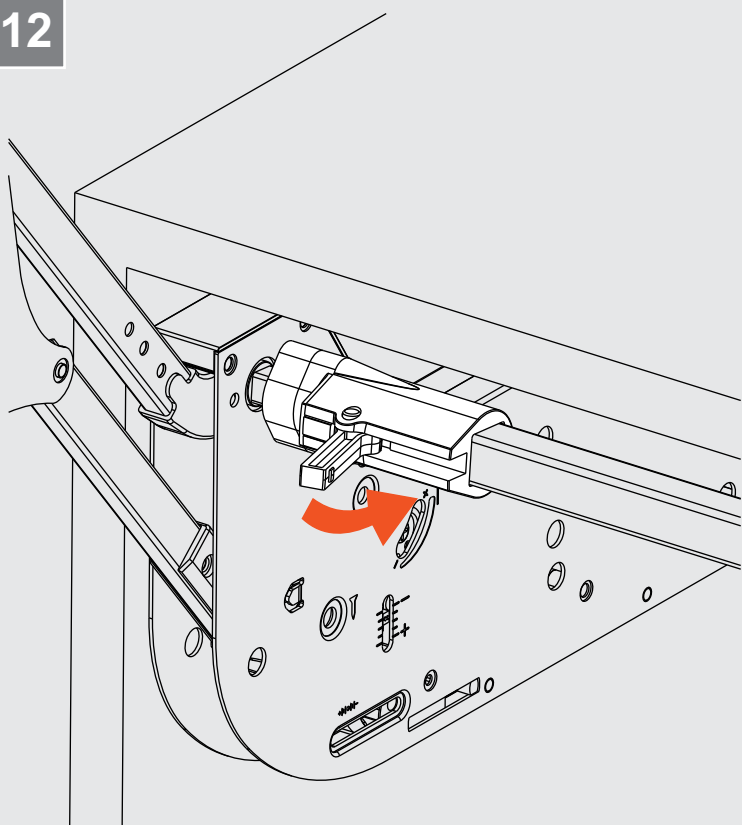

13

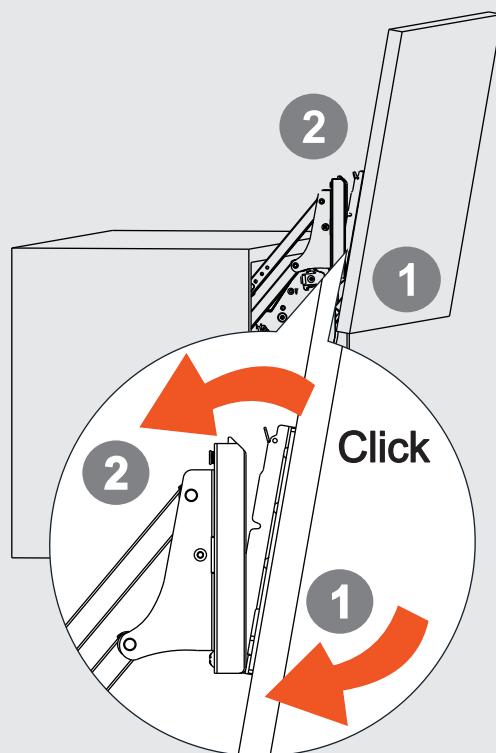




TCH-311012 129.S INSTALLATION INSTRUCTIONS

Adjustment instructions

Front panel alignment adjustment.

Note: Loosen the locking screw before making any adjustments.
Once the adjustment is complete, re-tighten the screw to secure the setting.

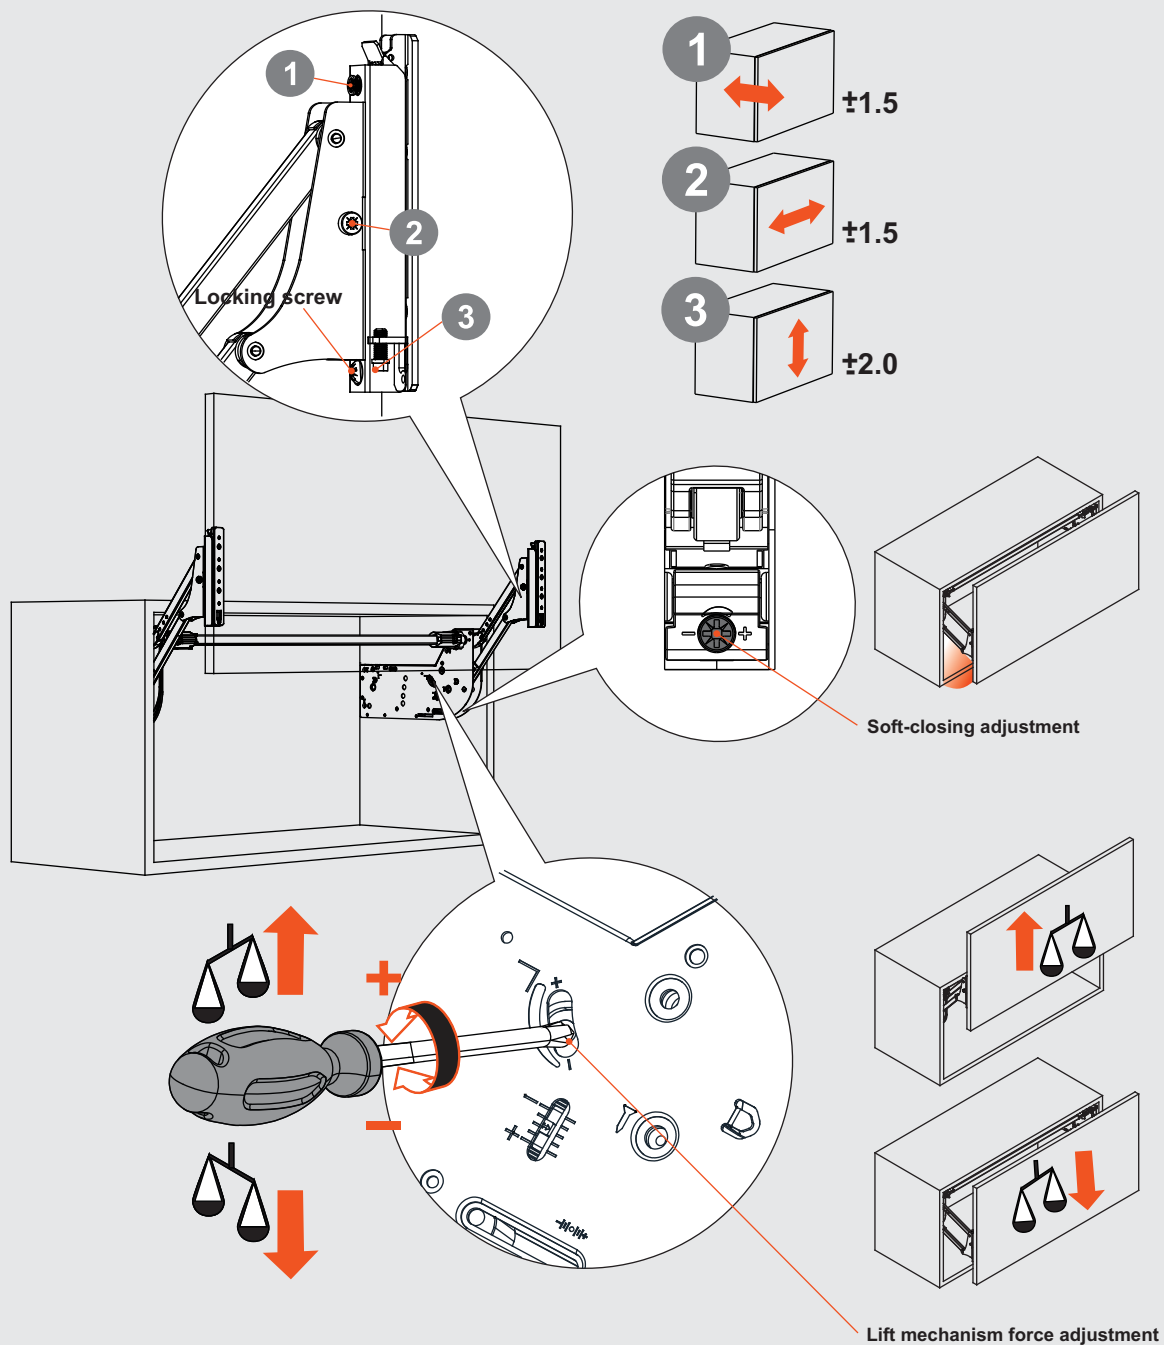



TCH-311012 129.S INSTALLATION INSTRUCTIONS

Attach cover caps

14

