


TOUCH

TCH-313000 337.S


FREE-STOP SLIM UPWARD DOOR LIFT SYSTEM



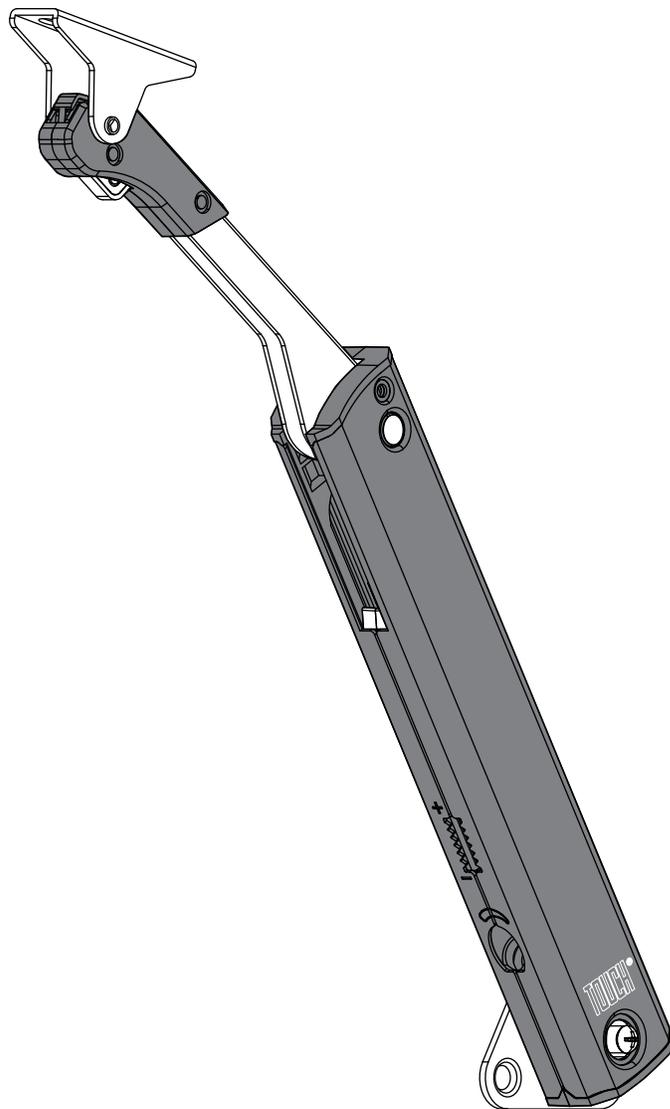

TCH-313000 337.S INSTALLATION INSTRUCTIONS

Included components

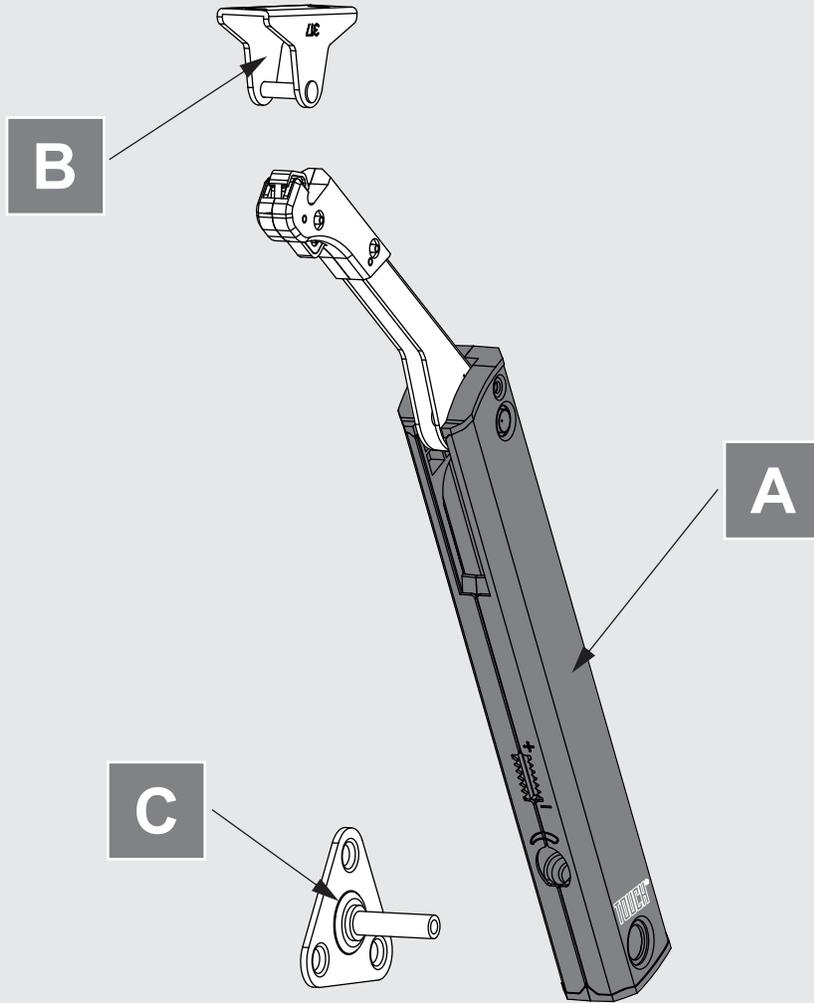

D



E




F




G



H

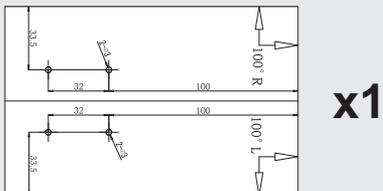

I

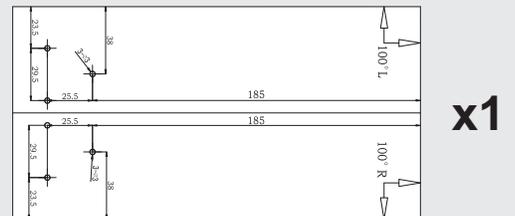




TCH-313000 337.S
INSTALLATION INSTRUCTIONS


Installation guide

WARNING

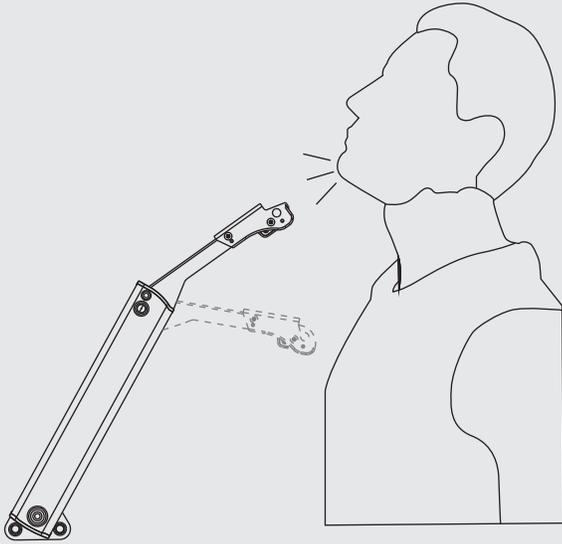

- Do not push the arm assembly downward or leave it in the lowered position.
- Always remove the mechanism before installing or removing the cabinet to avoid damage or injury.

i

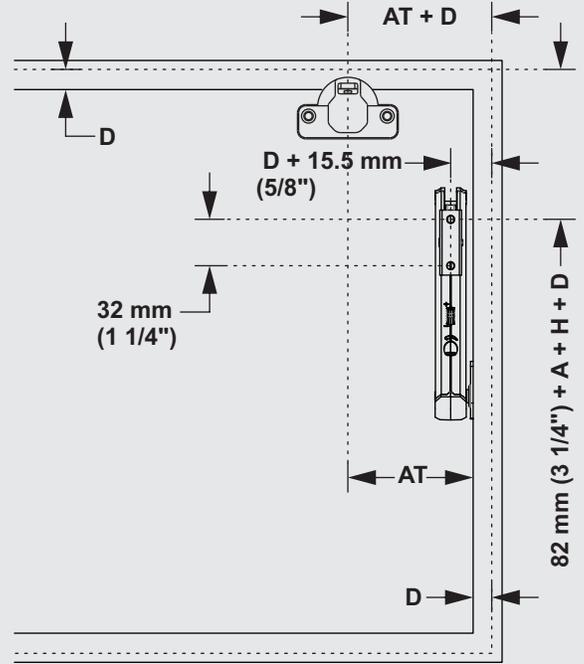


A = Hinge Arm Crank


- Straight Arm Crank: A = 0 mm
- Half-Cranked Arm: A = 9.5 mm
- Full-Cranked Arm: A = 18 mm

H = Mounting plate height
D = Overlay

1

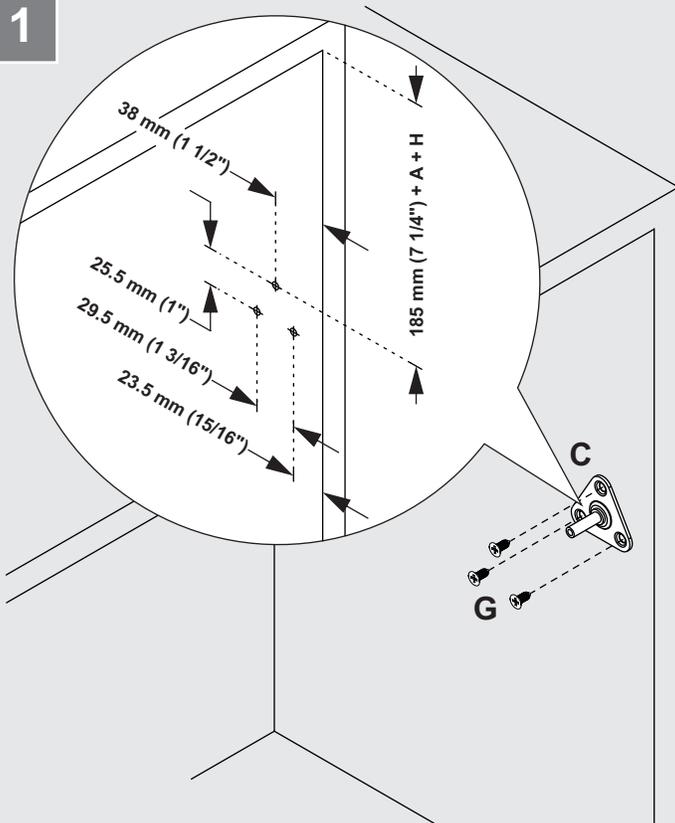

2

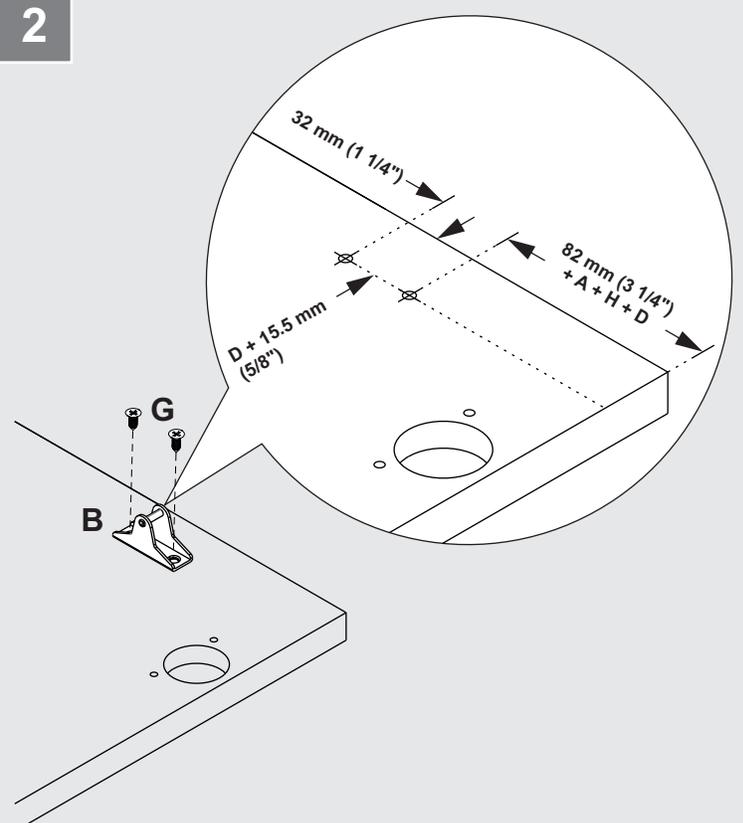




TCH-313000 337.S INSTALLATION INSTRUCTIONS


Installation guide

i



Recommended Pairing:
Use with the T-X hinge series featuring integrated opening angle restrictors (85° / 95° / 105°) and built-in soft-close function for enhanced door control and quiet closing performance. (Hinges sold separately.)

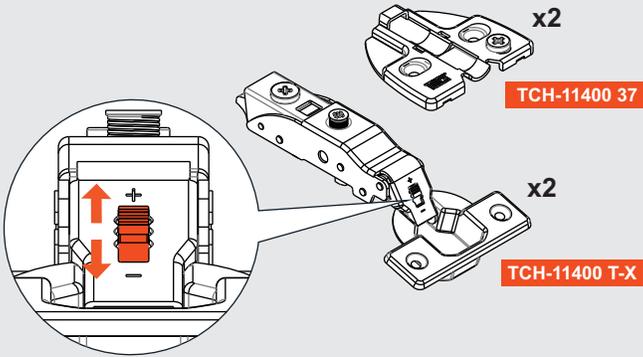

3

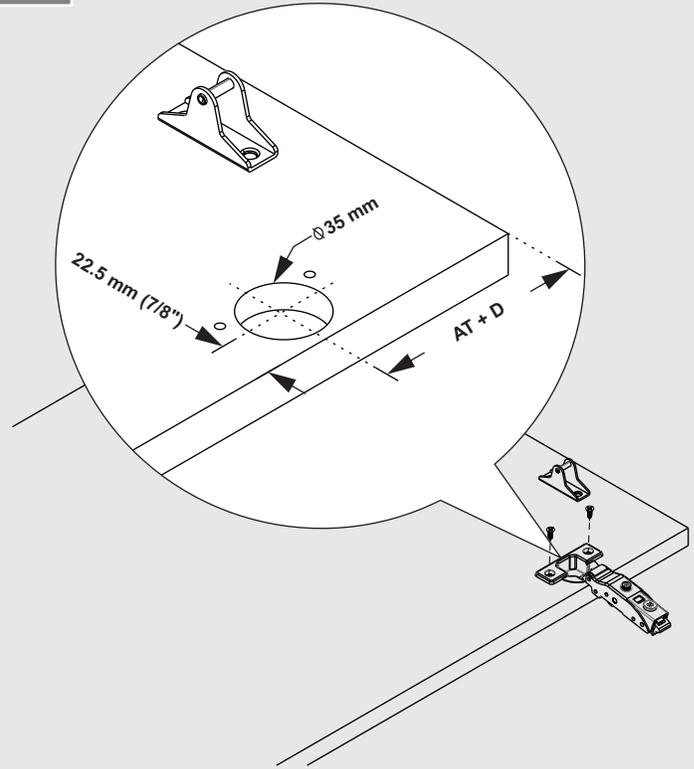

4

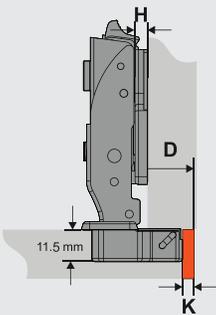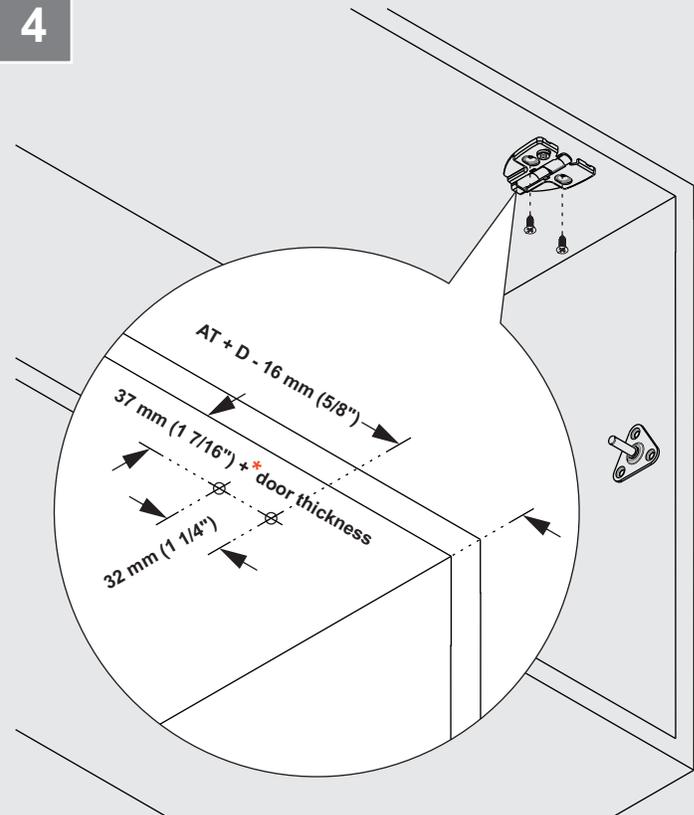


Straight-arm

D	H	K	3	4	5	6	7
0			16	17	18	19	20
3			13	14	15	16	17
4			12	13	14	15	16
5			11	12	13	14	15

Abbreviations

H	mounting plate height
K	cup boring distance
D	door overlay

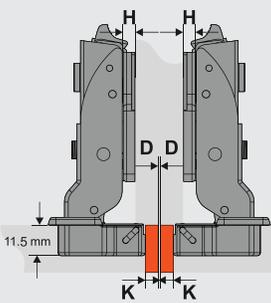


Half-cranked

D	H	K	3	4	5	6	7
0			7	8	9	10	11
3			4	5	6	7	8
4			3	4	5	6	7
5			2	3	4	5	6

Abbreviations

H	mounting plate height
K	cup boring distance
D	door overlay

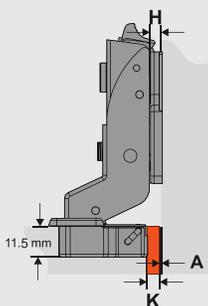

* Full-cranked

A	H	K	3	4	5	6	7
0			2.5	1.5	0.5		
3			5.5	4.5	3.5	2.5	1.5
4			6.5	5.5	4.5	3.5	2.5

Abbreviations


H	mounting plate height
K	cup boring distance
A	reveal



TCH-313000 337.S
INSTALLATION INSTRUCTIONS


Installation guide

i Clearance for cornice and crown molding

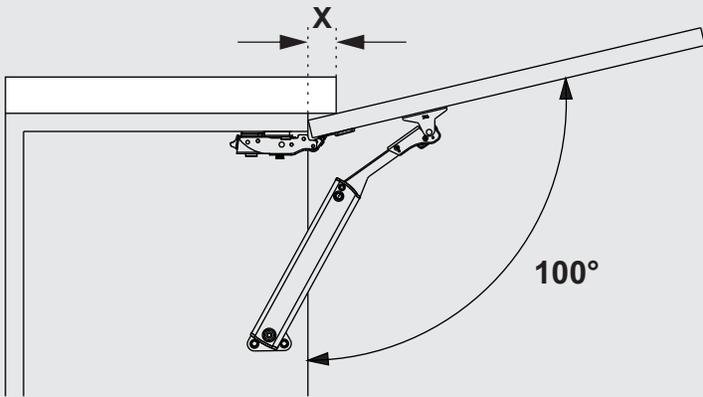


Door thickness	MM	16	19	22	25
	IN	0.6	0.8	0.9	1
X	MM	42	31	20	12
	IN	1.7	1.2	0.8	0.5


5

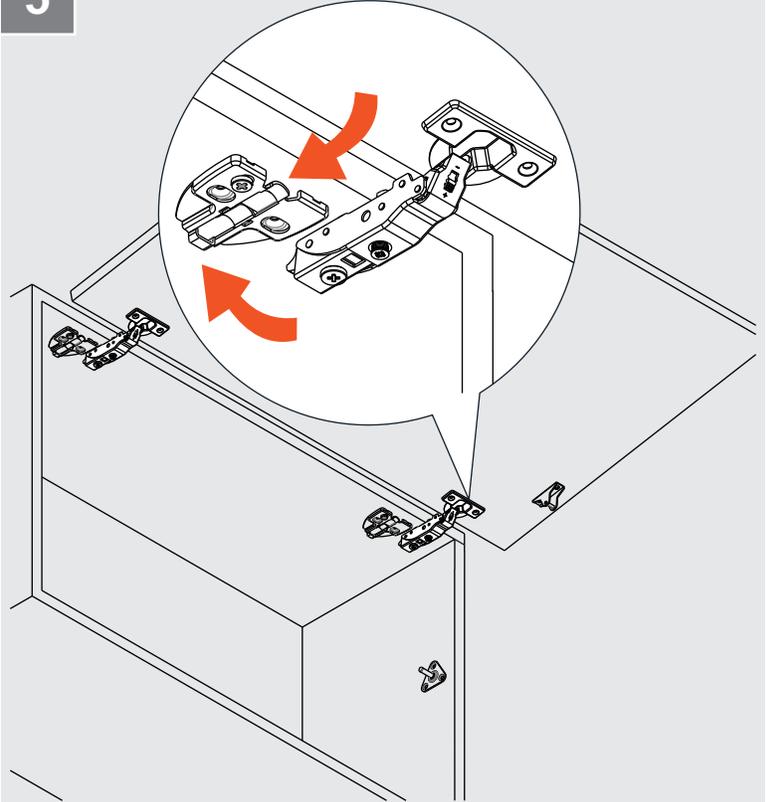

6

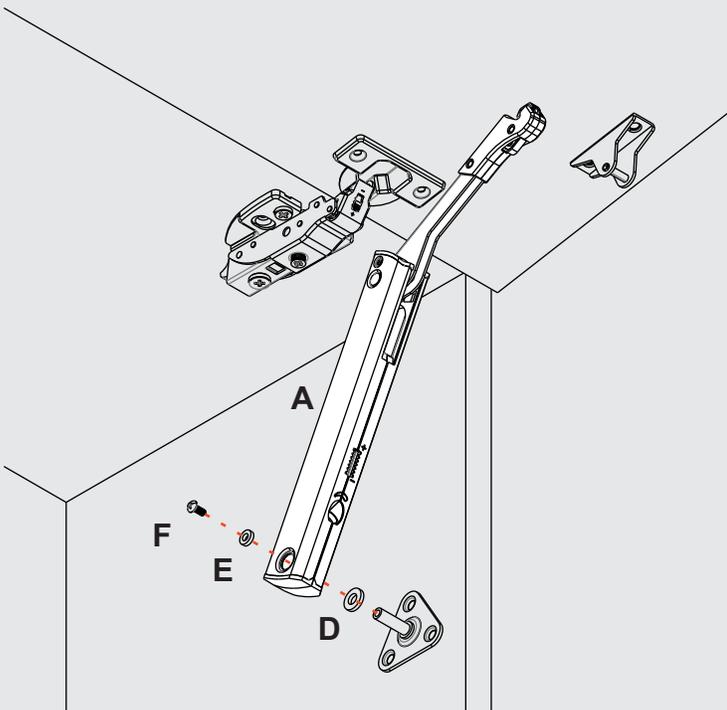

7

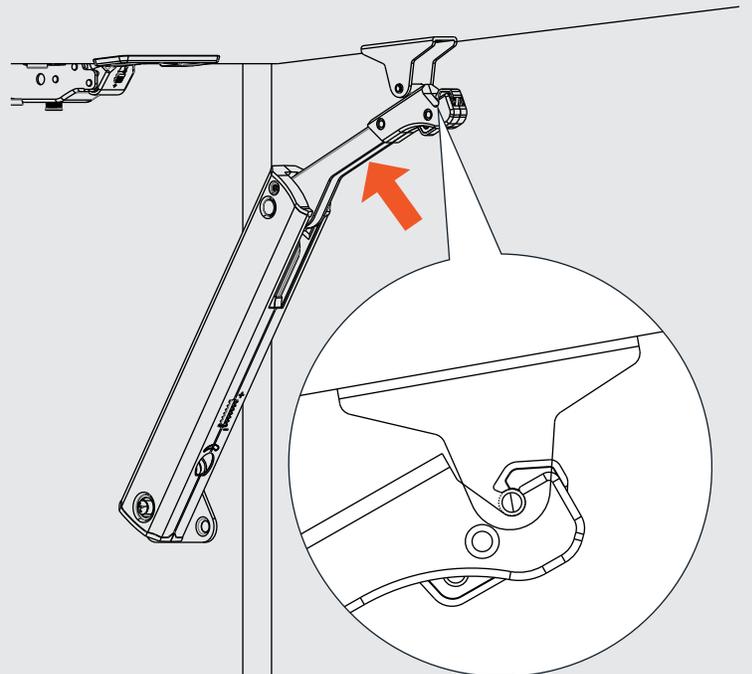



TCH-313000 337.S INSTALLATION INSTRUCTIONS

Adjustment instructions

